


EPOS

IMPACT SD 30 HS

Battery Removal Guide

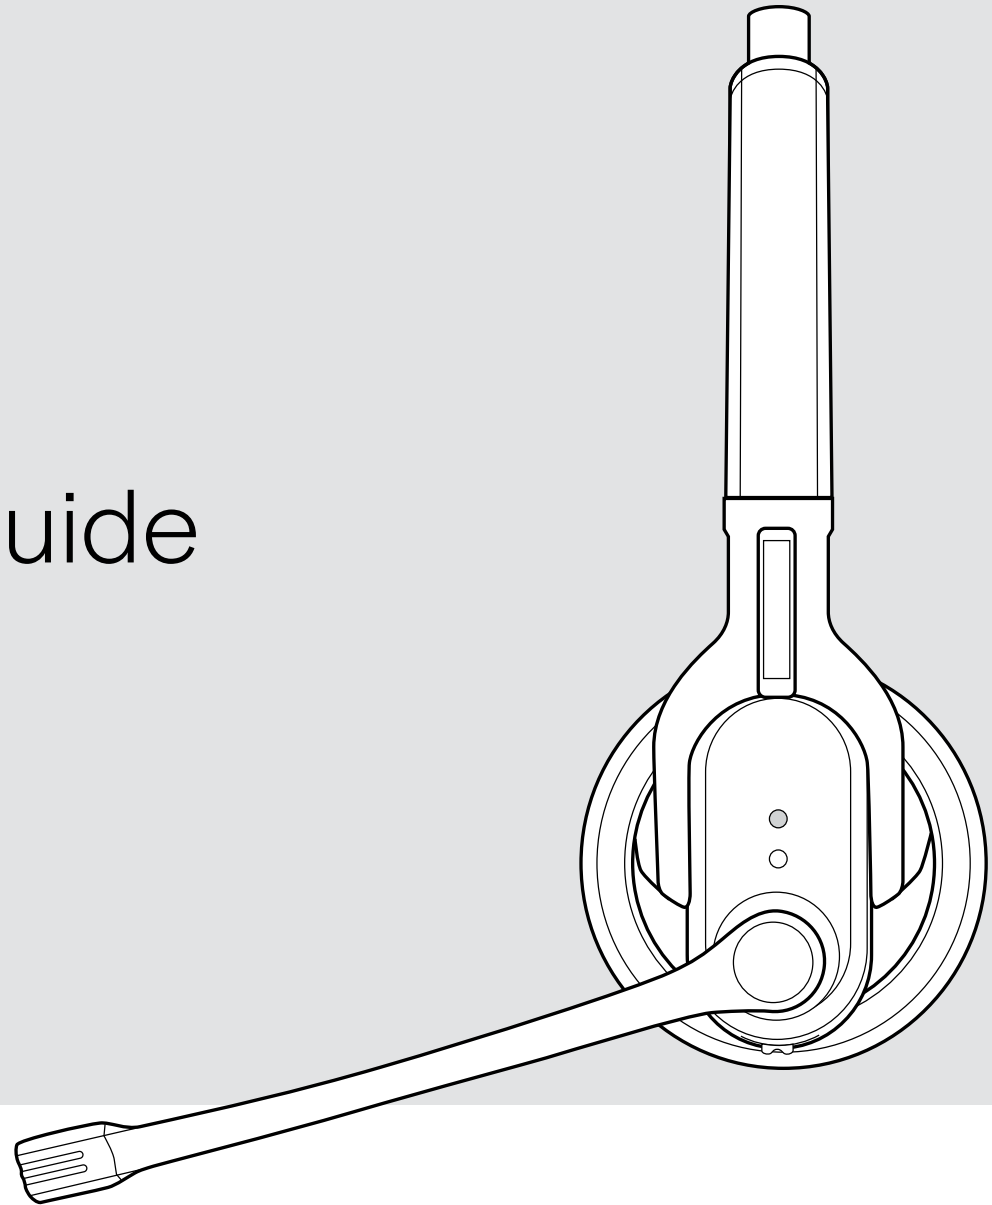

DSEA A/S




Kongebakken 9, DK-2765 Smørum, Denmark

www.eposaudio.com

Publ. 12/21, A01

THE POWER OF AUDIO

Battery Removal Guide

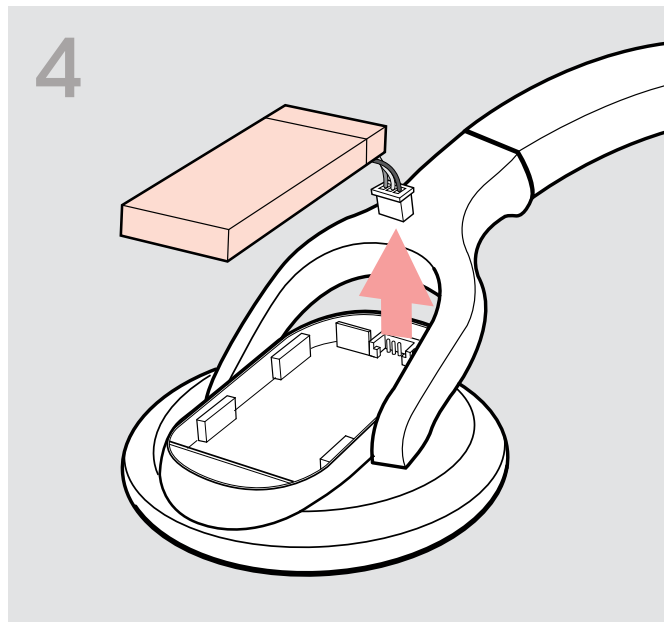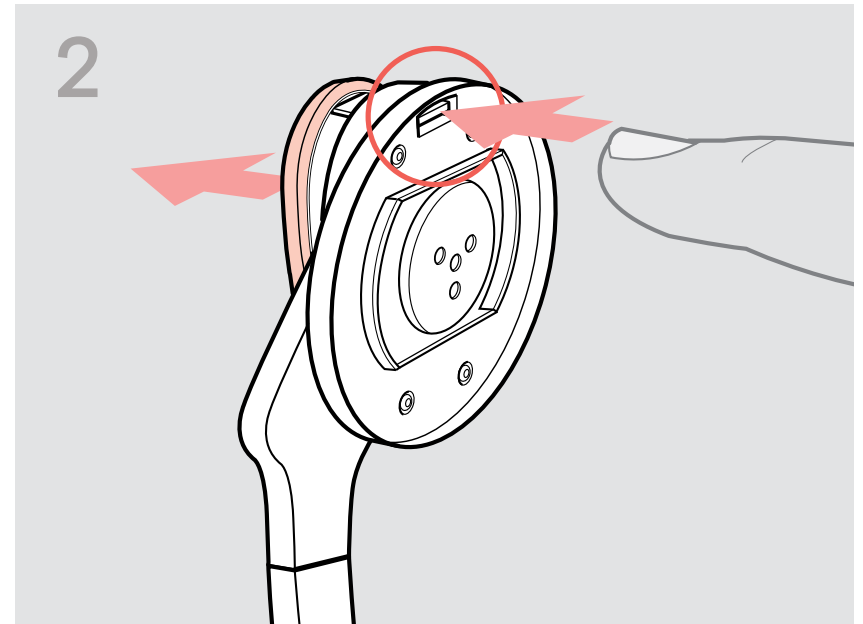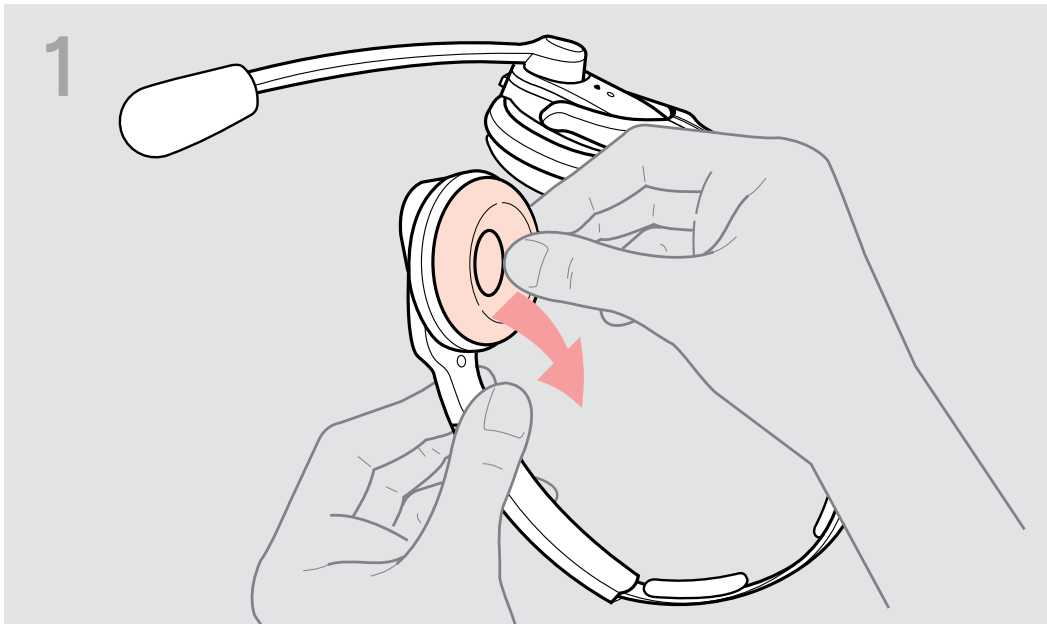

1. Remove the ear pad from the ear cup without microphone.
2. Open the battery compartment cover.
3. Lift the rechargeable battery.
4. Unplug the connector and remove the rechargeable battery.